


**Designer Series™ DSVR-80000 Sink  
Discontinued**

**DISCONTINUED**

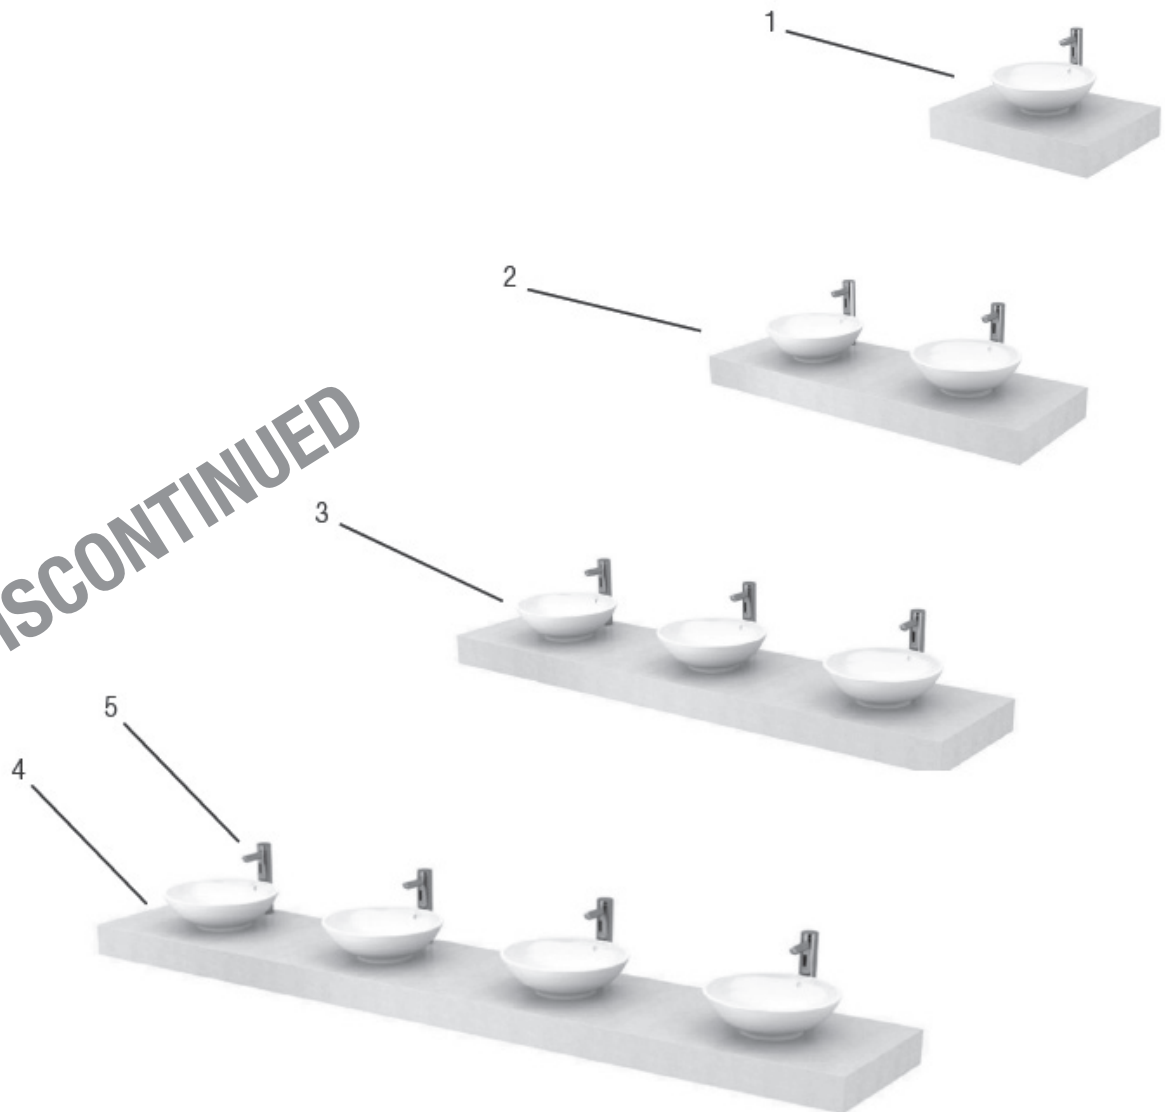

Item No.	Description
1	DSVR-81000 Deck (single)
2	DSVR-82000 Deck (double)
3	DSVR-83000 Deck (triple)
4	DSVR-84000 Deck (quadruple)
5	Sloan Faucet (model varies)
6	Grid Strainer Assembly (not shown)

## Designer Series™ DSVR-80000 Sink Discontinued

### TROUBLESHOOTING GUIDE

**Material Description:** Corian Material is made from a blend of acrylic modified bio-based polyester resin. Engineered Stone is 90% natural quartz and polyester resin and is resistant to chemicals, stains, burns and impact. Surface damage can be easily repaired with everyday cleansers or fine grit abrasives.

**Routine Cleaning:** For regular cleaning, use standard commercial or household products such as Simple Green®, Creamy Cleanser brand, Formula 409® or Windex®.

**Stubborn Stains:** Remove tough stains, with non abrasive cleaners and pads such as a white Scotch Brite® pad and Lysol®. Special Situations for Corian and Engineered Stone

**Hard Water Deposits:** Remove hard water deposits with a mild solution of vinegar and water. Always rinse the unit thoroughly after cleaning.

**Repair Kits:** Corian repair kits are available. Contact your Sloan Stone Sink Systems representative or distributor for part numbers and pricing. Repair kits are made to order and have a shelf life of 30 days. Engineered Stone shades of color can vary from product to product.

### BRAND NAMES

Use of brand names is intended only to indicate a type of cleaner. This does not constitute an endorsement, nor does the omission of any brand name cleaner imply inadequacy. Many products named are regional in distribution, and can be found in local supermarkets, department and hardware stores, or through your cleaning service. It is emphasized that all products should be used in strict accordance with package instructions.

Refer to appropriate faucet pages in Maintenance Guide.

#### 1. No water flows when sensor is activated

Ensure that main power supply is turned "ON." Check receptacle, transformer, batteries (battery powered models), solenoid, leads and connections.

INDICATOR: If Sensor LED does not blink:

A. Control module circuit board is faulty; replace.

B. Sensor is faulty; replace sensor module.

INDICATOR: If Sensor LED blinks when user is sensed:

A. Supply Stop(s) may be closed; open Supply Stop(s).

B. Debris may be in Solenoid filter; remove, clean and reinstall.

#### 2. Very low flow or slow dribble

A. Supply Stop(s) may be closed; open Supply Stop(s).

B. Debris is in solenoid, won't close properly; remove operator and clean. Reassemble in the same manner.

C. Debris may be in Solenoid filter; remove, clean and reinstall.

D. Debris is in aerator; remove, clean and reinstall.

#### 3. Continues to run (even after power to faucet has been disconnected)

A. Solenoid valve is installed backwards; install correctly.

B. Debris is in solenoid, won't close properly; remove operator and clean. Reassemble in the same manner.

DISCONTINUED