


Sloan Mobile Handwashing Station MH-3000 Installation and Operation Instruction

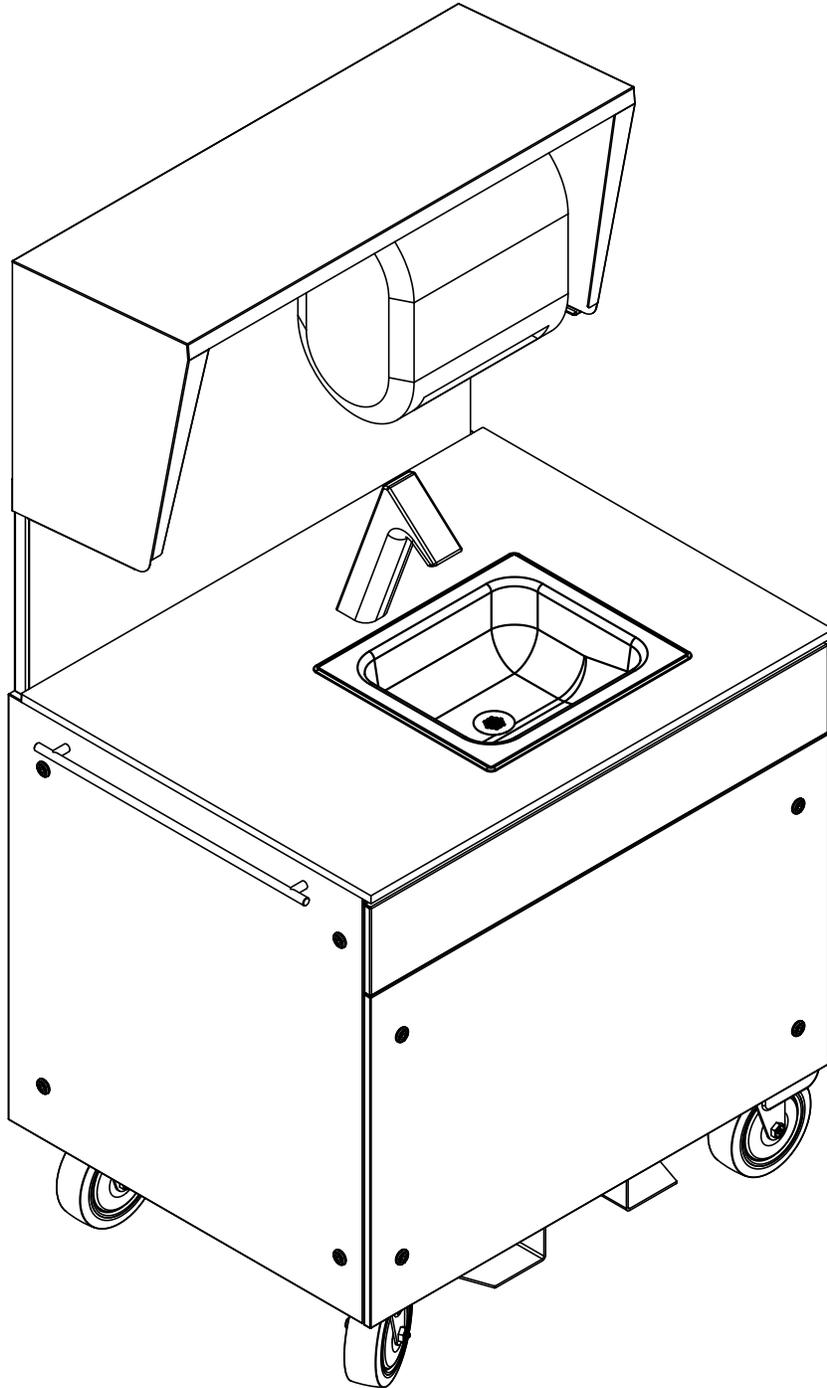


Limited Warranty

Unless otherwise noted, Sloan Valve Company warrants its Mobile Handwashing Sink to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which it is intended in a thoroughly reliable and efficient manner when properly installed and serviced, for a period of one year from date of purchase. During this period, Sloan Valve Company will, at its option, repair or replace any part or parts which prove to be thus defective if returned to Sloan Valve Company, at customer's cost, and this shall be the sole remedy available under this warranty. This warranty covers enclosure framing, panels, countertop material and attachments. It does not limit or extend individual product component warranties provided by the component manufacturer. No claims will be allowed for labor, transportation or other incidental costs. This warranty extends only to persons or organizations who purchase Sloan Valve Company's products directly from Sloan Valve Company for purpose of resale. This warranty does not cover the life of the batteries.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO EVENT IS SLOAN VALVE COMPANY RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGES OF ANY MEASURE WHATSOEVER.


Figure 1

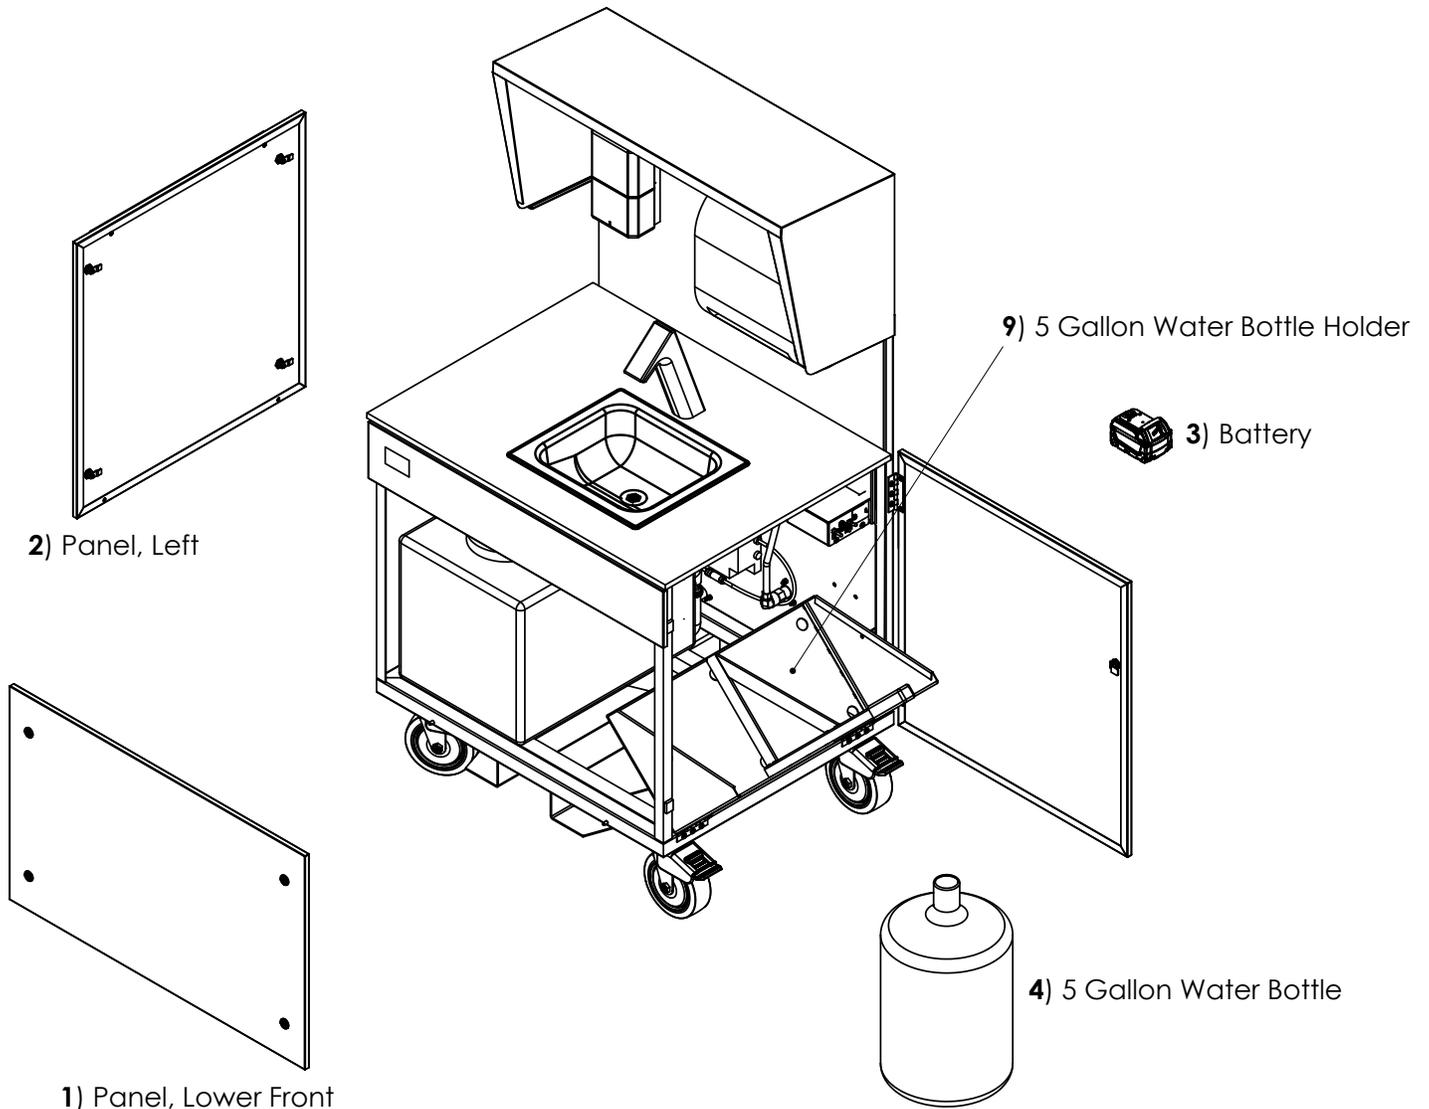

Parts List			
Description	Item Number	Quantity	
Panel, Lower Front	1	1	
Panel, Left	2	1	
5AH Li-Ion Battery	3	1	
5 Gallon Water Bottle	4	2	
Battery Charger (Not Shown)	5	1	
1/4" Hex Key (Not Shown)	6	1	
Paper Towel Key (Tool) (Not Shown)	7	1	
Trash Bag Holder (Not Shown) For standard 13 gallon draw-string trash bag, see spare parts list for details.	8	1	
5 Gallon Water Bottle Holder	9	1	

MH-3000 Mobile Hand Hyg 1 St SS Tank Component Layout

Figure 2

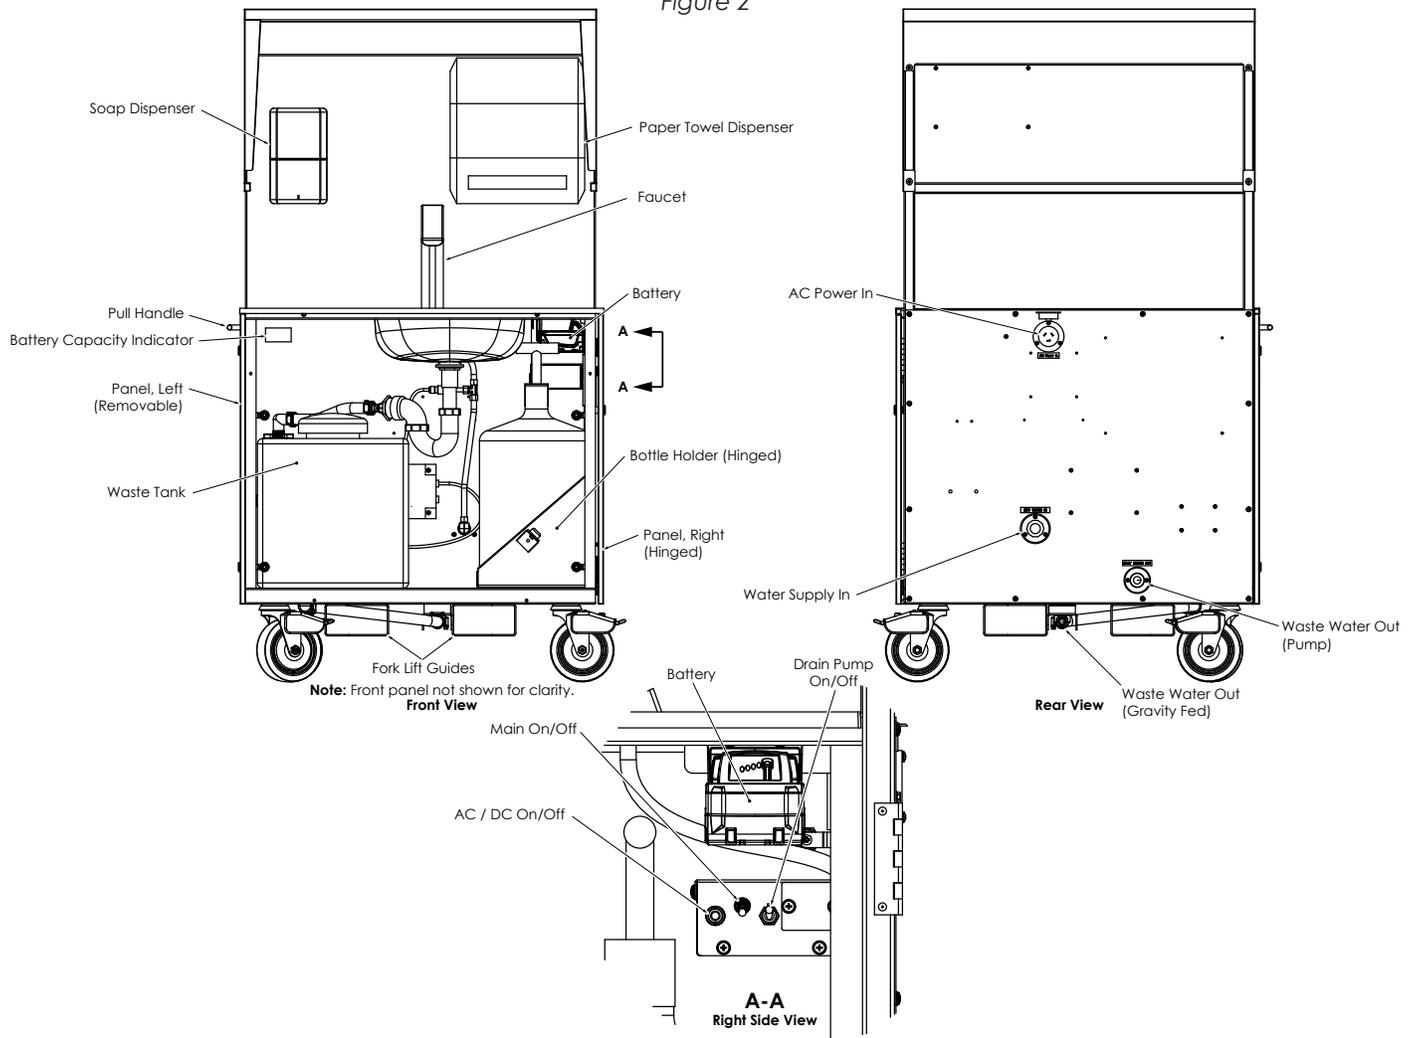

Component / Description	
Component	Description
Soap Dispenser	GOJO CS-8
Paper Towel Dispenser	EnMotion Impulse Auto Paper Towel Dispenser, White
Faucet	Sloan EFX-150 Faucet
Battery	Milwaukee 5AH Li-Ion Battery
5 Gallon Water Bottle	Empty 5 Gallon Water Bottle
Water Bottle Holder	5 Gallon Water Bottle Holder (Holds two 5 gallon water bottles, not included)
Access Panel - Right	Hinged
Access Panel - Front	Removable
Access Panel - Left	Removable
Waste Tank	16 Gallon Waste Tank
Pull Handle	Handle for moving unit around facility
Battery Capacity Indicator	Displays battery level of unit
AC Power In	3 Prong Twist Lock
Water Supply In	3/4" garden hose connection
Waste Water Out	3/4" garden hose connection
AC / DC On/Off	3 way toggle switch, center off
Main Power Switch On/Off	Main power switch to the Mobile Handwashing Sink
Drain Pump Switch On/Off	Supplies power to the drain pump

Initial Setup Prior to First Use

IMPORTANT

(Must be completed before initial power up and water connection)

- To reduce odors and build-up of scum, pour 4 ounces of a non-toxic holding tank cleaner into the sink drain daily. Flush the waste tank monthly with clean water. Sanitation of the fresh water pump (if applicable) must be completed prior to initial use.
- Batteries for the paper towel dispenser are shipped loose and must be installed prior to initial use.
- Soap bottle is shipped loose and must be installed prior to initial use.

This mobile handwashing sink has multiple options for power, water supply, and drainage. See below.

Power

- AC Power
 - Select this option when power can be supplied by an external source.
- DC Power (If applicable)
 - Select this option when external power is not available, and battery power is required.

Water Supply

- External Water Supply
 - Select this option when external water connection is available, this option can be connected via a 3/4" garden hose.
- 5 Gallon Water Supply (If applicable)
 - Select this option when external water connection is not available, two 5 gallon water bottles are required.

Drainage

- Manual (Gravity fed)
 - Select this option if no power is available to the unit. This option is controlled by a ball valve.
- Electric Pump
 - Select this option select this option if AC or DC power has been select, this option is controlled by a switch.
 - Select this option if waste needs to be pumped up hill or over a long distance.

Faucet:

- Refer to detailed EFX-150 instructions available via Sloan.com for the following:
 - Sensor calibration (If required)
 - Note:** Failure to properly calibrate the faucet sensor may lead to unexpected activation and increase maintenance intervals.
 - Priming
 - Battery battery replacement
 - Care and cleaning

Soap Dispenser:

- Refer to detailed CS-8 instructions available via GOJO.com for the following:
 - Installation of replacement soap bottle and battery (Shipped together)
 - Care and cleaning

Paper Towel Dispenser:


- Refer to EnMotion manufacturer instructions for the following:
 - Installation of batteries (Included, shipped loose)
 - Paper towel installation
 - Paper length setting
 - Care and cleaning

16 Gallon Waste Tank

- Cleaning of Grey Water Tank
 - The 16 Gallon grey water tank must be treated to break down waste and eliminate odors. Using a liquid holding tank cleaner/treatment, follow the holding tank cleaner instructions for cleaning or treatment of grey water holding tank. For best results, clean and flush the tank weekly regardless of the water level or usage. Recommend using a formaldehyde-free formulation that is safe for all pipes including PVC. Routine treatment is an important step to ensure reliable service.

Setting Up for External Water Supply In and Waste Water Out

Figure 3

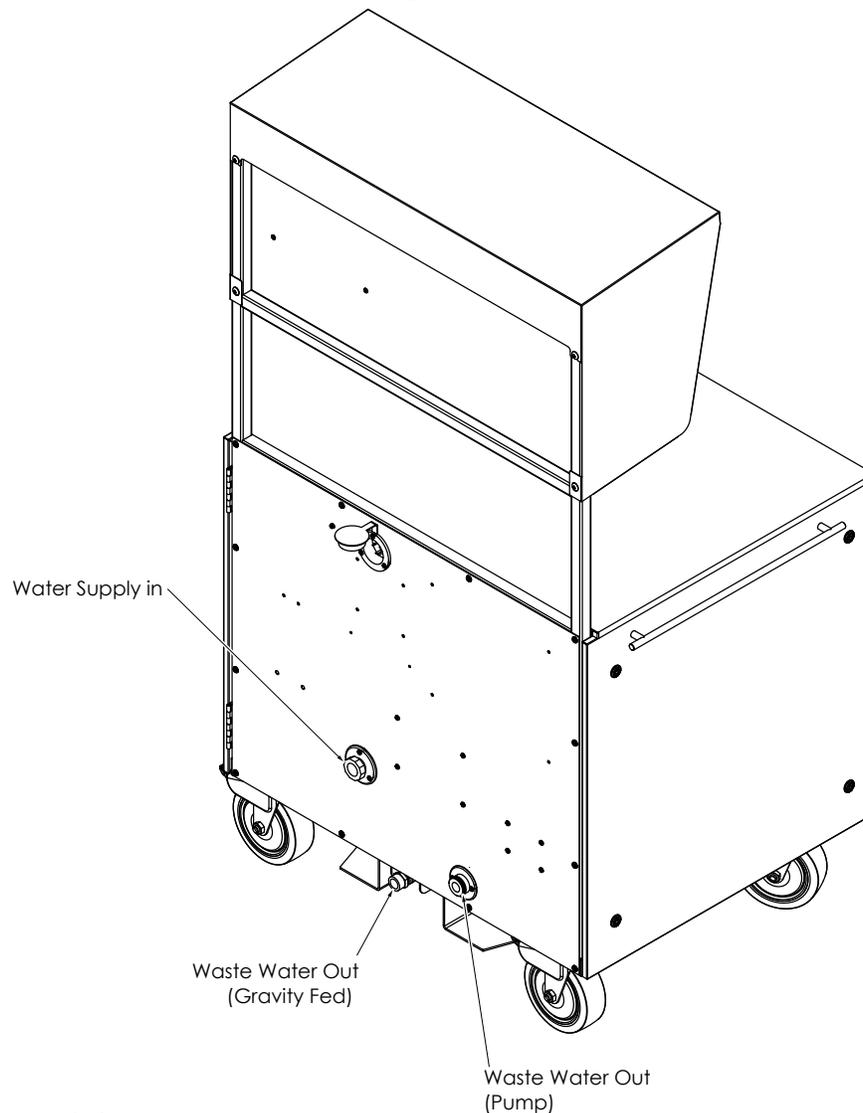


1. Connect to water supply in.
 - a. Make sure that the external water is OFF
 - b. Using a standard 3/4" garden hose or equivalent, connect to an external water supply.
 - c. Connect the opposite end of the hose to the Water Supply In on the middle, rear panel of the Mobile Handwashing Sink.
 - d. Make sure that connection is tight and does not leak.

2. Connect to waste line out (Gravity Fed).
 - a. Using a standard 3/4" garden hose or equivalent, connect to the Waste Line Out on the bottom, rear panel of the Mobile Handwashing Sink.
 - b. Make sure that connection is tight and does not leak.
 - c. Place the opposite end of the hose in an appropriate area for draining waste water tank.

3. Connect to waste line out (Pump).
 - a. Make sure that the gravity fed ball valve is in the closed position.
 - b. Using a standard 3/4" garden hose or equivalent, connect to the Waste Line Out on the bottom, rear panel of the Mobile Handwashing Sink.
 - c. Make sure that connection is tight and does not leak.
 - d. Place the opposite end of the hose in an appropriate area for draining waste water tank.

Connect the AC Power In

Figure 4

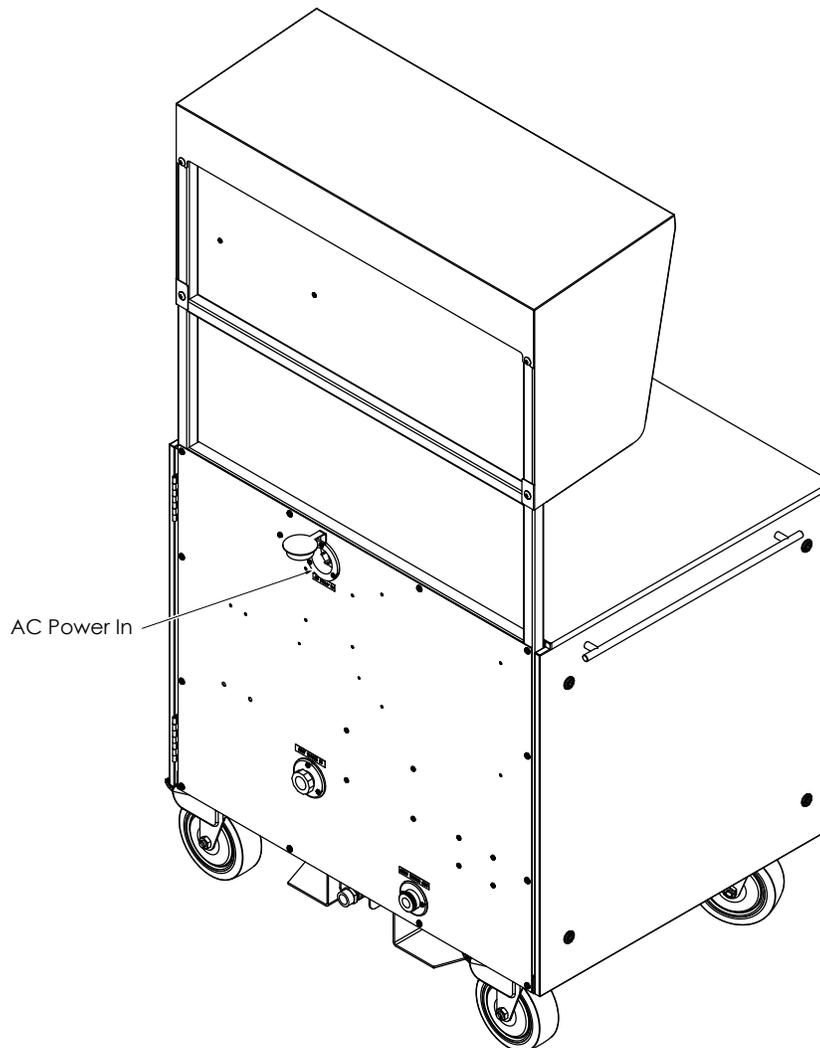

WARNING - Risk of Electric Shock. Connect Only to a Supply Protected by a Ground-Fault Circuit-Interrupter (GFCI).


1. Connect the power cord into the receptacle labeled "AC Power In (110 VAC)" located at the back of the Mobile Handwashing Sink. The power cord must be inserted into the receptacle and then twisted clockwise to lock in place. Connect the opposite end of the cord into a 15Amp or greater 110 VAC receptacle.

Note:

Strain Relief - UL 1951, Clause 10.4 and C22.2 No. 68, Clause 5.6 - A flexible cord shall be provided with a means to reduce the transmittal of tensional or rotational force from the cord to the wiring connections. A detachable flexible power supply cord will be permitted for the 120 VAC powered Hand Washing Stations if the appliance inlet is a twist-lock design.

Operation Instructions AC Power

Figure 5

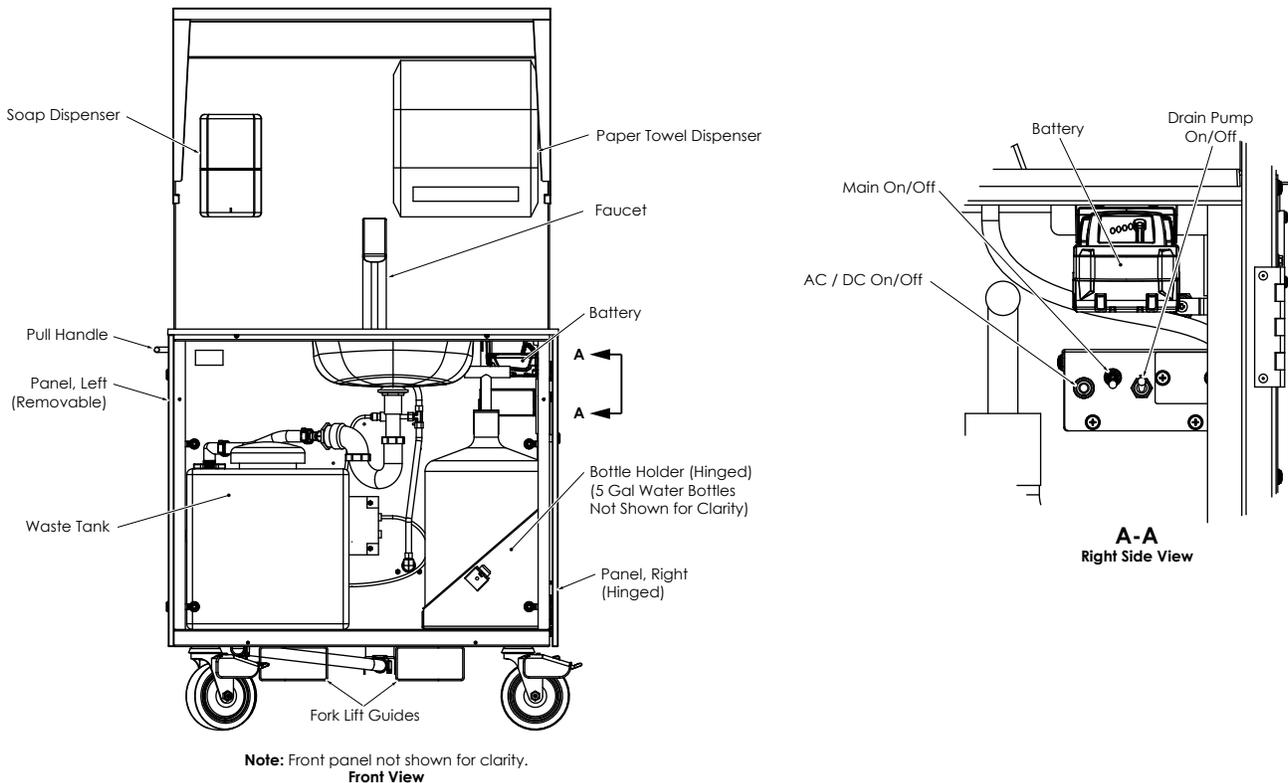


1. Position the Mobile Handwashing Sink where needed.
2. Lock each caster in place to secure the Mobile Handwashing Sink in place.
 - a. Press down on the lock lever for each caster until the lever locks into place and the caster no longer rotates freely.
 - b. To release the lock lever, press up on each lock lever until the lever locks in the open position and the caster rotates freely.
3. Connect external water supply in and the waste line out.
4. Connect the 12/3-Prong NEMA L5-15 AMP 125V Power cord into twist lock AC Power In receptacle on the rear panel of the Mobile Handwashing Sink, and connect the opposite end to an 110 VAC power source.
5. Using AC Power.
 - a. Position the AC / DC Switch to the AC position.
 - b. Position the Main On/Off Switch in the on position.
 - c. If using the electric drain pump option, position the drain pump switch in the On position.
6. When using the Mobile Handwashing Sink for the first time, prime the sensor faucet by moving your hand in front of the faucet sensor to prime the water lines.

The Mobile Handwashing Sink is ready for use.

7. Drain Waste Tank when above half full.
 - a. Periodically remove or open an access panel to check the waste tank water level. If the waste tank water level is more than half full, drain the waste tank.
8. Set all switches to the off position when not in use

Operation Instructions DC (Battery) Power

Figure 6

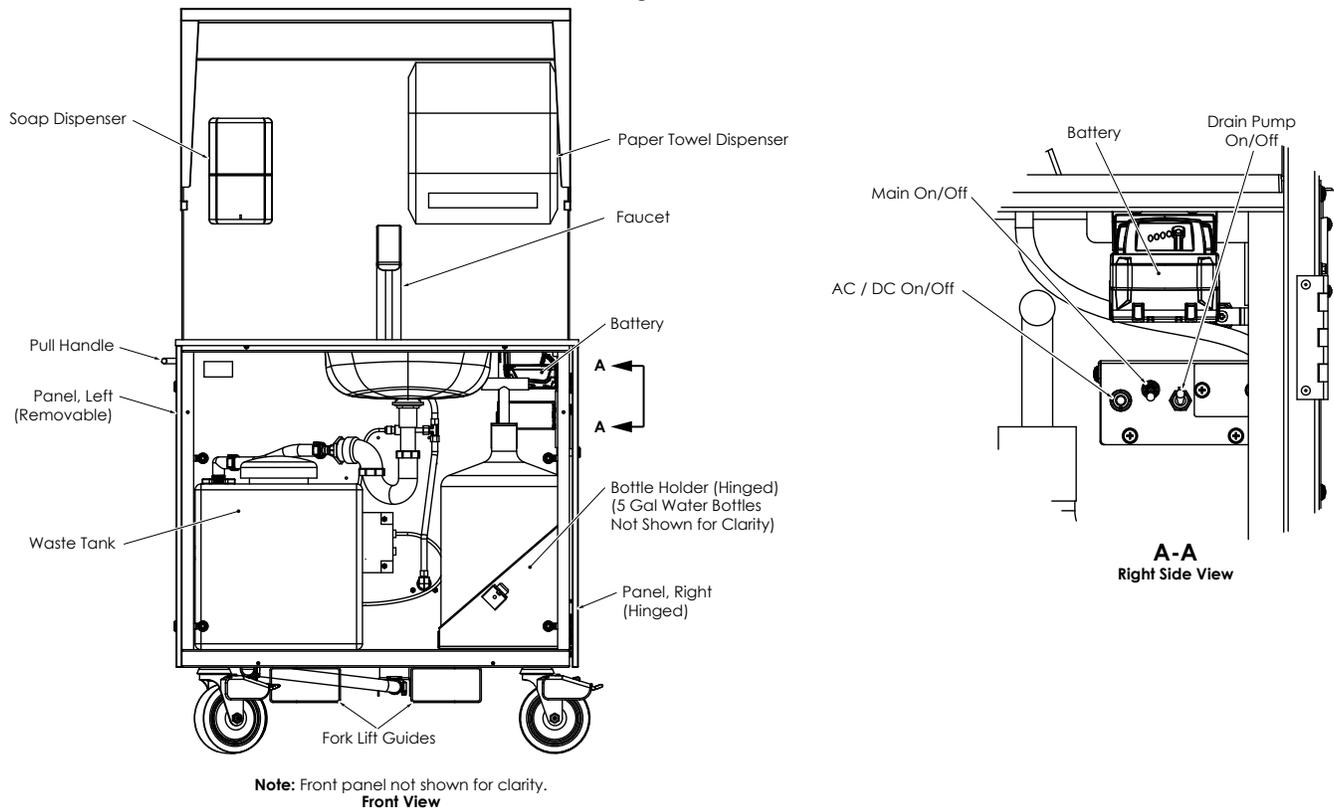

1. Position the Mobile Handwashing Sink where needed.
2. Lock each caster in place to secure the Mobile Handwashing Sink in place.
 - a. Press down on the lock lever for each caster until the lever locks into place and the caster no longer rotates freely.
 - b. To release the lock lever, press up on each lock lever until the lever locks in the open position and the caster rotates freely.
3. Connect external water supply in and the waste line out.
4. Using DC (Battery) Power.
 - a. Position the AC / DC Switch to the DC position.
 - b. Position the Main On/Off Switch in the on position.
 - c. If using the electric drain pump option, position the drain pump switch in the On position.

Note: Make sure battery is fully charged prior to use. Recharge battery as needed, minimum once daily.

5. When using the Mobile Handwashing Sink for the first time, prime the sensor faucet by moving your hand in front of the faucet sensor to prime the water lines.


The Mobile Handwashing Sink is ready for use.

6. Drain Waste Tank when above half full.
 - a. Periodically remove or open an access panel to check the waste tank water level. If the waste tank water level is more than half full, drain the waste tank.
7. Set all switches to the off position when not in use.

Note: AC/DC Switch, select the center position.

Install 5 Gallon Water Bottles

Figure 7

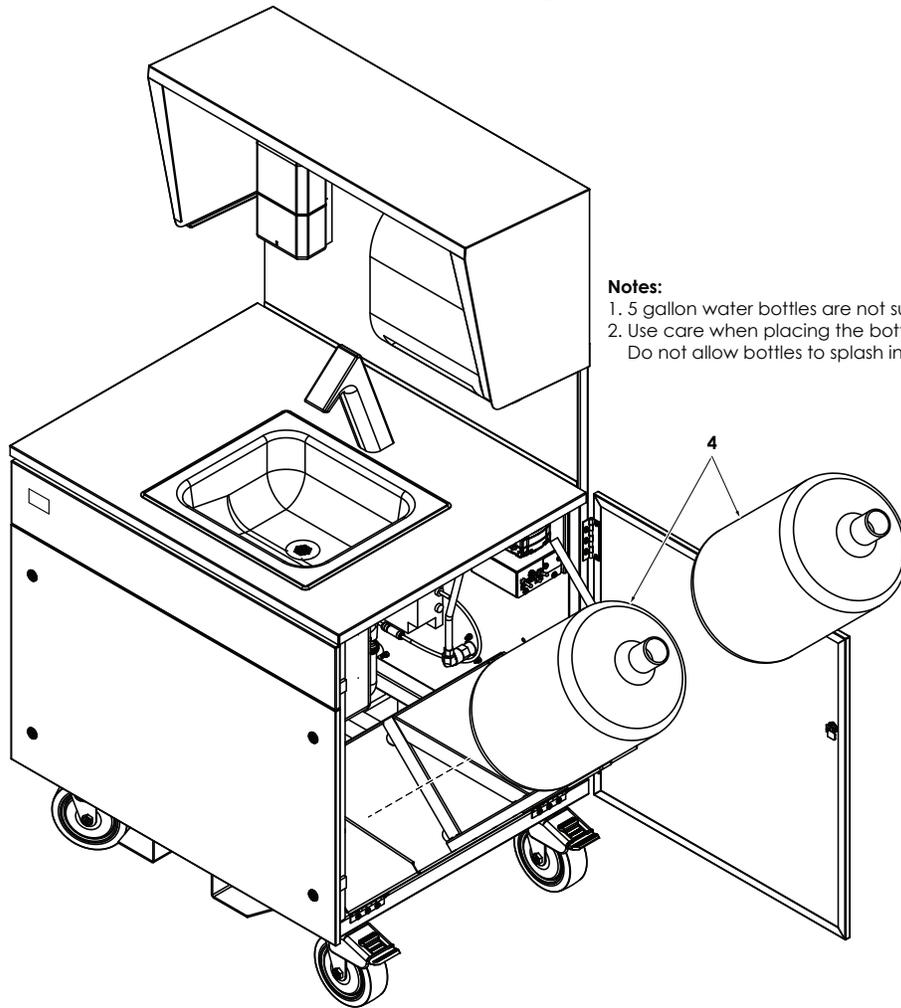

Notes:


1. 5 gallon water bottles are not supplied.
2. Use care when placing the bottles in to the bottle holder. Do not allow bottles to splash inside the unit.

1. If not using an external water source, install two, 5 Gallon Water Bottles (4) into the water bottle platform.
 - a. Fill the two 5 Gallon Water Bottles with potable water.
 - b. Tilt the water bottle platform as shown.
 - c. Insert two, filled, 5 Gallon Water Bottles (4) onto the water bottle platform.
 - d. Tilt water bottle platform back to the original position.
2. Insert water line into 5 Gallon Water Bottle (4).
 - a. Remove cap from 5 Gallon Water Bottle (4).
 - b. Insert suction wand that is attached to the supply water pump.
 - c. Make sure the power switch on the water supply pump is in the ON position.
3. Remove water line from the empty 5 Gallon Water Bottle (4) and repeat step 2 with new/full 5 gallon water bottle. DO NOT let the water line come into contact with any object during transfer.

Note: If bottle runs empty, float switch will shut off the unit.
4. When 5 Gallon Water Bottle (4) are empty, re-fill with potable water. Repeat step 1. Refer to the Care and Maintenance section (page 12) for cleaning instructions.

Draining the Waste Water Tank (Gravity Fed)


Figure 8

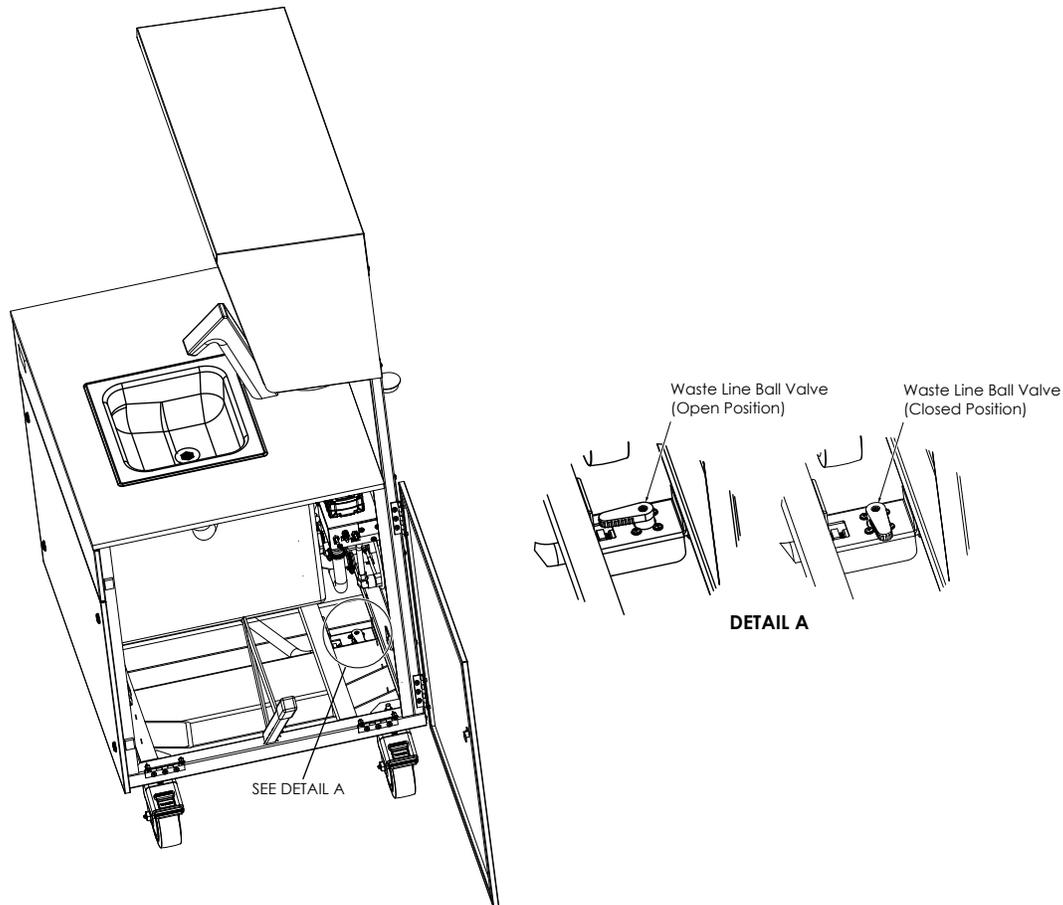

1. Drain the waste tank (Gravity Fed).
 - a. Make sure that waste line hose is connected to waste line out (Gravity Fed Location, Figure 3, page 5) at the bottom rear panel of the Rapid Response Wash Station.
 - b. Make sure that the opposite end of the waste line hose is in an appropriate location to drain the waste water tank. 16 gallons minimum drainage.
 - c. Open the right side access panel.
 - d. Locate the waste line ball valve and turn a 1/4 turn to open the valve.
 - e. Close the waste line ball valve when waste water tank is empty.
 - f. Close and latch the right access panel.

Draining the Waste Water Tank (Electric Pump)

Figure 9

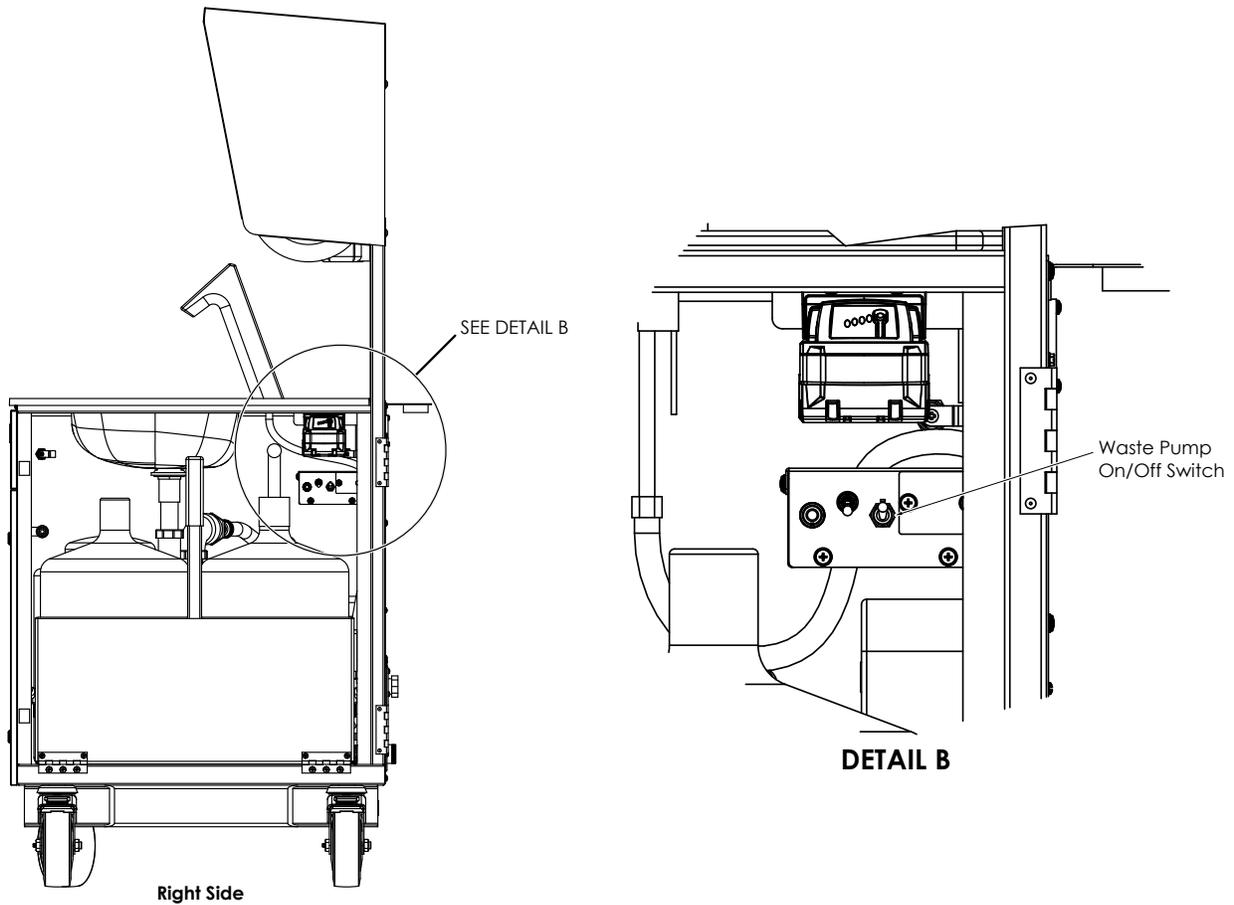

1. Drain the waste tank (Electric Pump).
 - a. Make sure that waste line hose is connected to waste line out (Pump Location, Figure 3, page 5) at the bottom rear panel of the Mobile Handwashing Sink.
 - b. Make sure that the opposite end of the waste line hose is in an appropriate location to drain the waste water tank. 16 gallons minimum drainage.
 - c. Use the 1/4" Hex Key (Included), unlock the cam latch on the right access panel. Open the right side access panel.
 - d. Locate the Main On / Off Switch and toggle to the On position.
 - e. Locate the Waste Pump On Off Switch and toggle to the On position.
 - f. Toggle Waste Pump Switch to the Off position when the waste tank is empty.

Note: Failure to turn the waste water pump off when the tank is empty can damage the pump or cause premature pump failure.
 - g. Close and latch the right access panel.

Suggested Usage Schedule		
Description	Unit of Measure	Frequency
Fresh Water	5gal Bottle	3 per Day
Waste Water	16 gal Tank	Drain Daily
Battery Charge	Full Charge	Weekly
Soap Refill	Refill	2 per Day
Paper Towel Refill	Roll	Daily

Notes:

1. Frequency may vary per actual daily use. Usage schedule assumes 150 uses per day.
2. Recharge battery daily, regardless of use. Make sure that battery is fully charged prior to each use.
3. Empty and treat waste water tank weekly, regardless of use.

WARNING

DO NOT operate or store Mobile Hand Washing Station below freezing temperatures. Damage to internal components may occur.

Care and Maintenance

Stainless Steel Care

Stainless steel has a bright surface that is easy to clean and is free from oxides. Therefore, cleaning of stainless steel is relatively simple and easy if done on a regular basis.

Frequency of cleaning should depend on the rate at which the fixture becomes dirty. Remember that fresh (soft) deposits of all kinds are relatively easy to remove, while removing older are much more difficult. Establish a cleaning SCHEDULE. Routine cleaning should involve ordinary soap or detergent and water, applied with a sponge, brush or cloth. Rinse THOROUGHLY and wipe dry.

DO NOT use common steel wool, scouring pads, scrapers, wire brushes, files or other steel tools to clean stainless steel. Certain chemical compounds, if used on stainless steel can give the appearance of rust and if allowed to stand for long periods of time can pit the surface of stainless steel. Products containing hydrochloric acid, muriatic acid or potassium hydrochloride should never be used.

Tips to Keep Stainless Steel Clean and Corrosion Free

1. Utilize the proper tools.
2. Wipe with the grain of the stainless steel.
3. Utilize alkaline, alkaline chlorinated, or non-chloride containing cleansers.
4. Soften hard water with filters to reduce mineral deposits.
5. Clean your equipment frequently to prevent food particles from causing pits and cracks.
6. If a chlorinated cleanser is used, rinse and dry immediately.
7. Absolutely, never under any circumstances use hydrochloric acid (muriatic acid) on stainless steel.
8. Periodically restore or passivate your stainless steel.

Lubrication

Periodically apply silicone or oil lubricant to moving parts such as casters and hinges for smooth operation and protection.

5 Gallon Water Bottle Sanitation

Clean the 5gal fresh water jugs once per week or as needed by either of these options:


1. Steramine[®] multi-purpose sanitizer.
2. A mixture of 10% bleach, 90% water.

Once clean, rinse the tanks with fresh water.

WARNING

DO NOT run bleach or any other liquid other than fresh, clean water through the plumbing system. Failure to comply may cause damage to components.

Illustrated Parts List

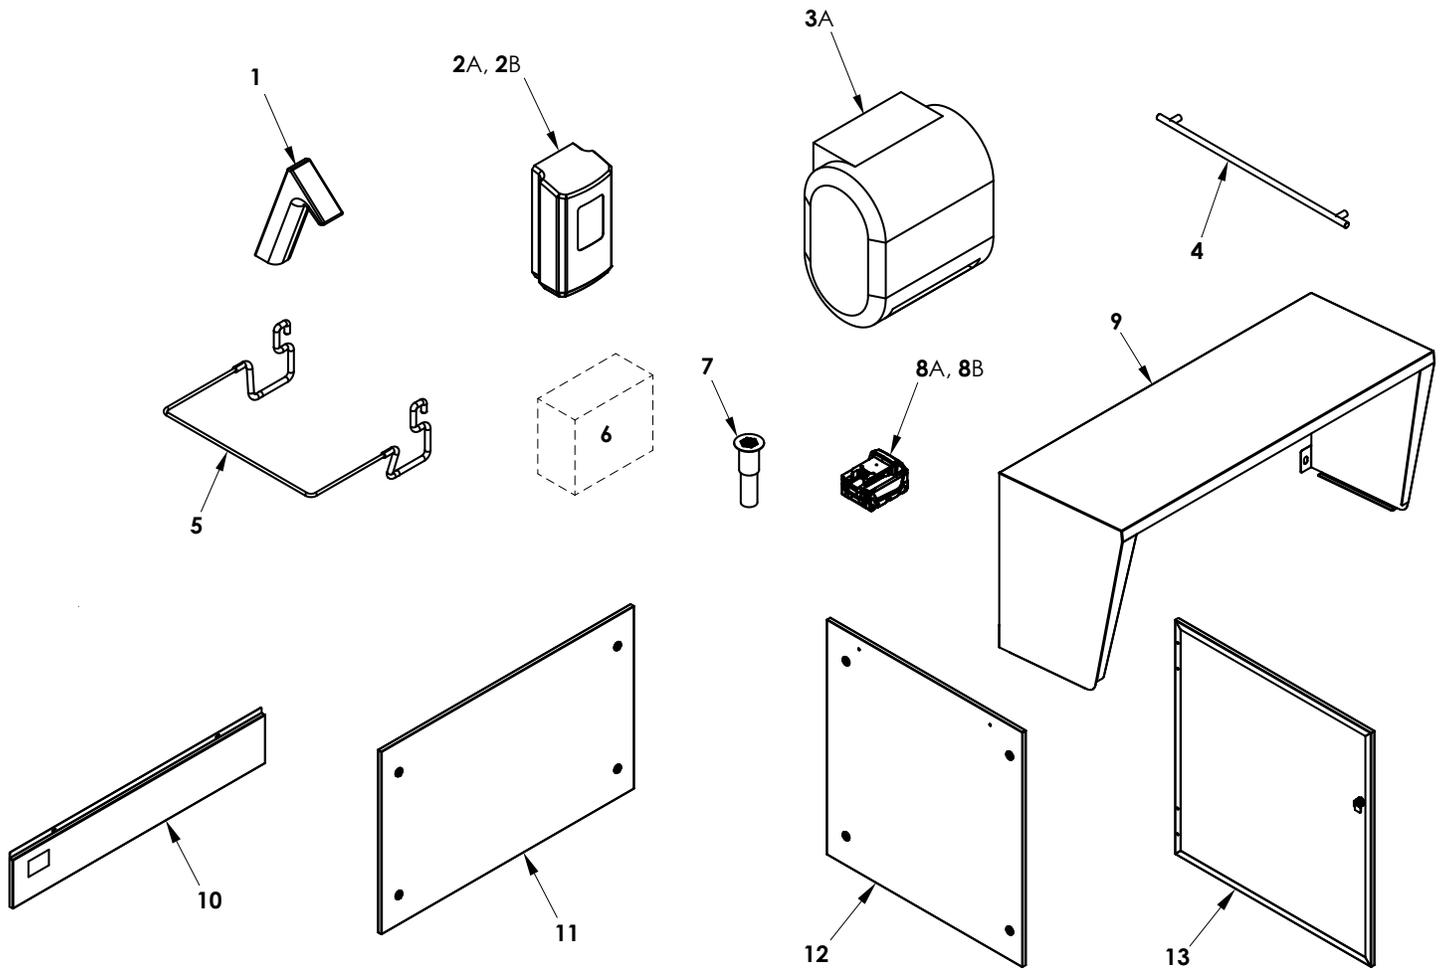

Spare Parts List

Item No.	Code No.	Description
1A	3324025	Sloan® BASYS® EXF-150 Sensor Faucet
2A	0383300	PURELL® CS8 Soap Dispenser
2B	0383301	PURELL® CS8 1200 mL HEALTHY SOAP® refill, 2pk.
3	0383332	Georgia Pacific® enMotion® Impulse® Automatic Paper Towel Dispenser, White
4	0383505	Pull Handle
5	0383390	Trash bag Holder
6	0383518	Graphic Label Kit
7	0386057	McGuire® ProDrain® with 1 1/4" Tailpiece
8A	0108620	Milwaukee® M18™ REDLITHIUM™ XC5.0 Extended Capacity Battery Pack, Cat. No. 48-11-1850
8B	0383352	Milwaukee® M18™ & M12™ Rapid Charger, Cat. No. 48-59-1808
9	0383323	Rain Hood
10	3830010	MH PANEL ASM-UPPER FRONT W/ DISPLAY
11	3830009	MH PANEL ASM-LOWER FRONT
12	3830006	MH PANEL ASM-LEFT
13	3830007	MH PANEL ASM-RIGHT
15	0108657	TWIST LOCK 15A CORD 8 FT