



**SF-2100/SF-2150**  
**SF-2400/SF-2450**

**PARTS LIST -- SF-2100/SF-2150, SF-2400/SF-2450**

Item No.	Code No.	Description
1A.	<b>9103804</b>	SF-2150 CP FAUCET BODY WITH LOGO (Models SF-2100 & SF-2150)
1B.	<b>9103666</b>	CP FAUCET BODY WITH LOGO (Models SF-2400 & SF-2450)
2.	<b>0306928</b>	F174 CP SPRAY HEAD 0.5 GPM MALE THREAD (Models 3362155IN, 3362157IN, 3362156IN, 3362158IN)
	<b>0365795</b>	CP SPRAY HEAD 0.35 GPM MALE THREAD (Models 3362182IN, 3362184IN, 3362186IN, 3362188IN)
	<b>3800001</b>	SPRAY HEAD CP-.5 GPM AERATED (SF) (Models 3362183IN, 3362185IN, 3362187IN, 3362189IN)
3.	<b>9103798</b>	SFP44A MNTG KIT SF2100/2400 POST 3/2010 (All Models)
4.	<b>9103691</b>	CONTROL BOX WITH BUTTON N/B (All Models)
5.	<b>9103706</b>	SF SENSOR WITH RANGE ADJ. ( All Models)
6.	<b>0362027</b>	SFP PLUG-IN TRANSFORMER (INDIA) (Models SF-2150/SF-2450)
7.	<b>9103279</b>	EBV9 BATTERY "AA" SIZE (4 PACK) (All Models)
8.	<b>9103627</b>	SFP5 MNTG HARDWARE KIT CONTR MODULE (All Models)
9A.	<b>9103623</b>	SFP10 FLEX HOSE 600MM x M10 x G1/2 FEM (All Models)
9B.	<b>9103316</b>	H-1 4' TO 3' HOSE CN (All Models)

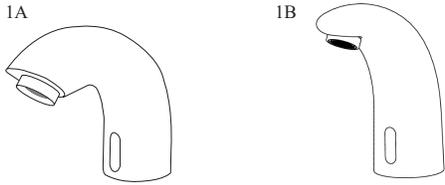

FOR  
SF-2100/2150  
SF-2400/2450

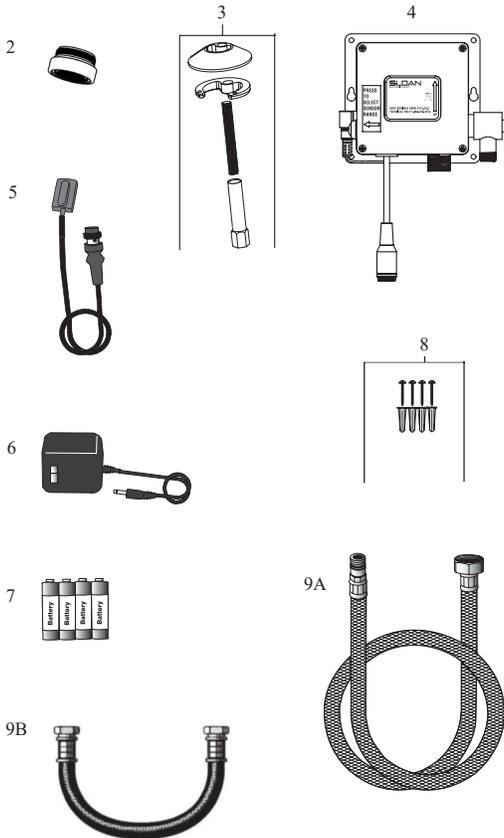

**NOT SHOWN SAPARATELY**

--	<b>0362015</b>	Strainer (located in water inlet of control module)
----	----------------	---

-- in Item No. column = Not shown in illustration  
 - in Code No. = Not sold separately

---

**SF-2100/SF-2150**  
**SF-2400/SF-2450**

---

**TROUBLESHOOTING GUIDE**

---

**1. Faucet delivers water in an uncontrolled manner.**

A. Faucet is not working properly. Contact Sloan Technical Support.

**2. Faucet DOES NOT deliver any water when sensor is activated. INDICATOR: Solenoid valve produces an audible "CLICK."**

A. Water supply stop(s) closed. Open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

**INDICATOR: Solenoid valve DOES NOT produce an audible "CLICK."**

A. Batteries low (battery powered models). Replace batteries.

B. Power failure (adapter powered models). Check power supply.

**3. Faucet delivers only a slow flow or dribble when sensor is activated.**

A. Water supply stop(s) are partially closed. Completely open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.

D. Faucet is not working properly. Contact Sloan Technical Support.

**4. Faucet DOES NOT stop delivering water or continues to drip after user is no longer detected.**

A. Faucet is not working properly. Contact Sloan Technical Support.

**5. The water temperature is too hot or too cold on a Faucet connected to hot and cold supply lines.**

A. Supply stops are not adjusted properly. Adjust supply stops.

**CARE AND CLEANING**

---

**DO NOT USE** abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel. While cleaning the bathroom tile, protect the faucet from

any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

**When assistance is required, please contact Sloan Technical Support at: 1800-123-3080.**