

CODE NUMBER

3453029

DESCRIPTION

1.0 gpf, Rough Brass Finish, 1.25" Flush Connection, Fixture Connection Rear Spud, Single Flush, 2-10.75 L Dimension, Electrical Override, Hardwired, Sensor-Operated, 24V, Royal® Concealed Sensor Hardwired Urinal Flushometer.

DETAILS

• Flush Volume: 1.0 gpf (3.8 Lpf)

• Finish: Rough Brass

Power Type: Hardwired (HW)

Valve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

• Fixture Connection: Rear Spud

• Rough-In Dimension: 14 ½" (368mm)

• Spud Coupling: 1 1/4" (32mm)

• Supply Pipe: 1" (25mm)

• L Dimension: 2"-10 3/4" (51-273mm)

• Override: Electrical

• Flush Connection: 1.25" (U)

• Voltage: 24V

FEATURES

Quiet, Concealed, Diaphragm Type, Rough Brass Urinal

- Non-Hold-Open Integral Solenoid Operator, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- Stop Seat and Vacuum Breaker molded from PERMEX® Rubber Compound for Chloramine Resistance
- High Back Pressure Vacuum Breaker Flush Connection and Spud Coupling for 11/4" Concealed Back Spud
- High Chloramine Resistant PERMEX® Synthetic Rubber Diaphragm with Linear Filtered Bypass and Vortex Cleansing ActionTM
- 1" I.P.S. Wheel Handle Bak-Chek® Angle Stop

VIDEOS



ESS Flushometer



COMPLIANCES & CERTIFICATIONS













(ADA Compliant, BAA Compliant, BABAA Compliant, cUPC Certified, UL Certified, UPC Certified)

RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

ELECTRICAL SPECIFICATIONS

• Arming Delay: 8 seconds

• Control Circuit: Solid State/24 VAC Input/24 VAC Output

• Flush Delay: 1s

• Self-Adaptive Window: ±8

Sensor Range: 15"-30" (381-762mm)

Solenoid Operator: 24 VAC

• Transformers (specify separately):

0345154

0345999

VALVE OPERATING PRESSURE (FLOWING)

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

DOWNLOADS

- Royal ESS Concealed with Wall Box Installation Instructions
- Royal ESS Concealed and Exposed Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Optima ESS Repair and Maintenance Guide
- Additional Downloads

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com



NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the ROYAL 190 ESS product? View the general spec sheet with all options.

WARRANTY

View Warranty Information

ROUGH-IN

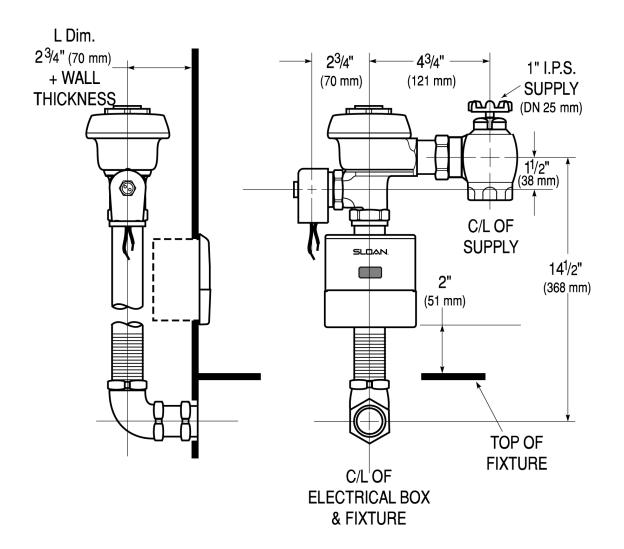

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com