

#### **CODE NUMBER**

3982530

## **DESCRIPTION**

0.5 gpf, XL Sweat Solder Adapter Kit, Polished Chrome Finish, 0.75 Flush Connection, Fixture Connection Top Spud, Single Flush, 0.75" Inlet, 3/4" Control Stop, True Mechanical Override, Battery, Infrared, Regal® Exposed Sensor Urinal Flushometer.

#### **DETAILS**

• Flush Volume: 0.5 gpf (1.9 Lpf) • Finish: Polished Chrome (CP)

 Power Type: Battery Valve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

• Fixture Connection: Top Spud

• Rough-In Dimension: 11 ½" (292mm)

• Spud Coupling: 3/4" (19mm) • Supply Pipe: 3/4" (19mm)

• Override: True Mechanical (TMO)

• Control Stop: 3/4" • Inlet: 0.75"

• Flush Connection: 0.75

• Adapter: XL Sweat Solder Adapter Kit (XL)

### **FEATURES**

• Four (4) size C batteries included

• "Low Battery" Flashing LED

• "User in View" Flashing LED

• No External Volume Adjustment to Ensure Water Conservation

True Mechanical Override Flush Button

• 72-Hour Sentinel Flush

• Sweat Solder Adapter w/Cover Tube and Cast Wall Flange with Set

- Stop Seat and Vacuum Breaker Molded from PERMEX® Rubber Compound for Chloramine resistance
- 3/4" I.P.S. Screwdriver Bak-Chek® Angle Stop with stop plug



## **COMPLIANCES & CERTIFICATIONS**























(ADA Compliant, BAA Compliant, BABAA Compliant, BREEAM Water Credit, CalGreen Compliant, cUPC Certified, cUPC Green Certified, Green Globes Water Credit, LEED V4 Water Efficiency Credit, UPC Certified, WaterSense Listed)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi- Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

## **ELECTRICAL SPECIFICATIONS**

• Flush Delay: 1s

Sensor Range: 15"-30" (381-762mm)

# **VALVE OPERATING PRESSURE (FLOWING)**

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

### **DOWNLOADS**

- EBV-500/550-A Installation Instructions
- EL-700/750-A Installation Instructions
- Regal XL Exposed Installation Instructions
- Regal XL Exposed (SP) Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Regal Flushometers Repair and Maintenance Guide
- EBV500/EBV550 Repair and Maintenance Guide
- Additional Downloads

## **NOTES**

All information contained within this document subject to change without notice.

Sloan 10500 Seymour Ave, Franklin Park, IL 60131

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com




Looking for other variations of the REGAL 186 SFSM product? View the general spec sheet with all options.


WaterSense compliant when used with a WaterSense compliant fixture

# WARRANTY

View Warranty Information

# **ROUGH-IN**

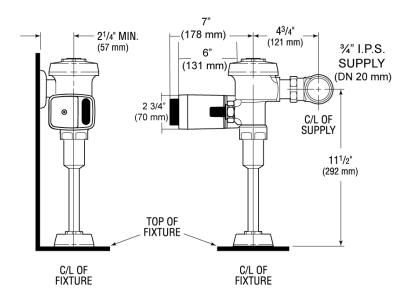

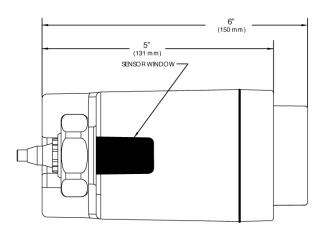

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com