


Naval® Flushometer

Also for use with Crown® (Old style), Star and Marine

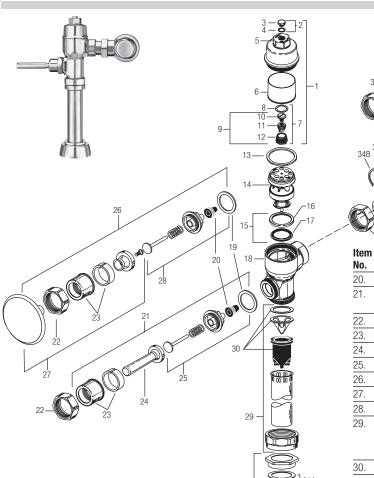

PARTS LIST

Item				
No.	Code No.	Part No.	Description	
1.	0314229	CN-86-A	Cover Assembly CP	
	0314310	CN-89-A	Cover Assembly CP One Pint*	
			1.6 gpf/6.0 Lpf, 1.0 gpf/3.8 Lpf	
2.	5314010	CN-1007-A	Cap Screw Repair Kit – 6 per package	
3.	0314208	CN-36	Cover Screw CP	
4.	0314209	CN-30	Cover Screw Gasket	
5.	0314304	CN-84	Cover	
6.	0214019	CN-55	Cover Liner	
7.	3314015	CN-1008-A	Regulating Screw Repair Kit**	
8.	0314303	CN-81	Volume Adjustment Gasket	
9.	0314315	CN-88-A	Low Consumption Volume Adjustment Sleeve	
			Sub-Assembly 1.6 gpf/6.0 Lpf, 1.0 gpf/3.8 Lpf	
10.	0314302	CN-80	Volume Adjustment Screw	
11.	0314300	CN-78	Volume Adjustment Sleeve	
	0314307	CN-87	Volume Adjustment Sleeve One Pint***	
12.	0314301	CN-79	Volume Adjustment Housing	
13.	5314243	CN-76	Cover Gasket – 12 per package	
14.	0314016	CN-1002-A	Piston - Closet	
	0314017	CN-1003-A	Piston – Urinal	
15.	0314234	CN-21-A	Main Seat Assembly	
16.	0314224	CN-111-A	Main Seat	
17.	0314220	CN-113	Main Seat Ring	
18.	0314020	CN-3	Body CP (Not sold separately)	
19.	5301139	A-31	Handle Gasket – 48 per package	

TAILPIECES, CONTROL STOPS, AND FLUSH CONNECTION'S

For additional information on tailpieces, control stops and flush connections see Showerhead's, Parts and Accessories Tab.

No.	Code No.	Part No.	Description	
20.	5302297	B-39	Handle Seal – 12 per package	
21.	0302390	B-73-A	Triple Seal Handicap Handle Assembly (ADA Compliant)	
22.	0301082	A-6	Handle Coupling CP	
23.	0302109	B-7-A	Socket Assembly CP	
24.	0302389	B-74-A	Handicap Handle Grip CP (ADA Compliant)	
25.	3302306	B-51-A	Triple Seal Handle Repair Kit – 1 per package	
26.	0303351	C-42-A	3" Push Button Assembly CP	
27.	3303347	C-1000-A	3" Push Button Replacement Kit	
28.	3303396	C-64-A	3" Push Button Repair Kit	
29. 5323005 V-500-AA 3/4" x 9		V-500-AA	3/4" x 9" Vacuum Breaker	
	5323006	V-500-AA	1-1/4" x 9" Vacuum Breaker	
	5323007	V-500-AA	1-1/2" x 9" Vacuum Breaker	
30.	3323192	V-551-A	Vacuum Breaker Repair Kit	
31.	0306125	F-5-AW	3/4" Spud Coupling CP	
	0306140	F-5-AU	1-1/4" Spud Coupling CP	
	0306146	F-5-AT	1-1/2" Spud Coupling CP	
31A.	SEE SLIP JOINT GASKETS AND RINGS TABLE ON BOTTOM, PAGE 42			
32.	0308676	H-550	Stop Coupling CP	
33.	0314289	NH-551-A	Adjustable Tailpiece 2-1/16" CP	

31A.	SEE SLIP JOINT GASKETS AND RINGS TABLE ON BOTTOM, PAGE 42			
32.	0308676	H-550	Stop Coupling CP	
33.	0314289	NH-551-A	Adjustable Tailpiece 2-1/16" CP	
34A.	5308696	H-553	0-ring – 24 per package	
34B.	5308381	H-552	Locking ring – 12 per package	
35.	0308063	H-6	Ground Joint Stop Coupling CP	
36.	0314028	NH-5	Ground Joint Tailpiece 1-5/8"	
37.	0388022	H-710-A	1" Adjustable Tailpiece SD Bak-Chek® Control Stop CP	
	0388025	H-710-A	3/4" Adjustable Tailpiece SD Bak-Chek® Control Stop CP	
38.	0388024	H-710-AG	1" Ground Joint Screwdriver Bak-Chek® Control Stop CP	
	0388026	H-710-AG	3/4" Ground Joint Screwdriver Bak-Chek® Control Stop CP	
39.	3308853	H-541-A	Control Stop Repair Kit †	
	3308856	H-543-A	Control Stop Repair Kit ‡	
40.	0308612	H-622	Bonnet CP †	
	0308843	H-577	Bonnet CP ‡ — DISCONTINUED	
41.	0308840	H-573	Control Stop Cap CP [†]	
	0308848	H-582	Control Stop Cap CP ‡	
42.	3308772	H-1010-A	Vandal Resistant Stop Cap Assembly †	
	3308790	H-1009-A	Vandal Resistant Stop Cap Assembly ‡	
43.	3308866	H-574	Control Stop Cap with Bumper †	
44.	3308867	H-576	Control Stop Cap with Extended Bumper [†]	
* Use	CN-89-A Cover A	Assembly One-Pin	t for reduced flush volumes 1.6 gpf/6.0 Lpf, 1.0 gpf/3.8 Lpf	

^{**} CN-1008-A Regulating Screw Repair Kit contains the parts shown plus the parts for old style adjusting screw as currently shown on the repair guide (CN-24, CN-25, CN-26, CN-61)

^{***} Use CN-87 Volume Adjustment Sleeve One-Pint for reduced flush volumes


[†] For use with 1" and 3/4" H-740-A-CP (less cap) and 1" H-540-A-CP (w/H-37 cap) Bak-Chek® screwdriver


[‡] For use with 3/4" H-740-A-CP Bak-Chek® screwdriver control stops



Naval® Flushometer

Also for use with Crown® (Old style), Star and Marine

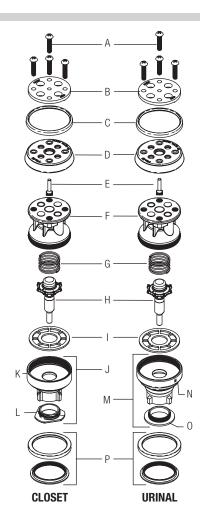

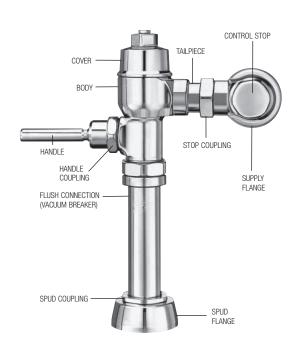

NAV	NAVAL PISTON COMPONENTS (Items 14 thru 17 on previous page)			
Item	Code No.	Part No.	Description	
Α.	0314200	CN-17	Top Plate Screws – 24 per package	
B.	0314082	CN-15	Top Plate	
	0314179	CN-15-A	Top Plate – Shower Valve only	
C.	0314314	CN-92	Support Cup Lip Seal	
D.	5314188	CN-68-A	Single Lip Cup – 12 per package	
E.	0314204	CN-57	Xpelor	
F.	0314228	CN-160	Piston Body	
G.	5328019	SH-406	Spring – 12 per package (Replaces S/CN-58 Safety Bar)	
H.	0314078	CN-18-A	Relief Valve	
l.	5314226	CN-120	Relief Valve Seat – 12 per package	
J.	0314240	CN-123-AC	Guide Assembly – Closet	
K.	0314231	CN-23	Guide - Closet	
L.	0314237	CN-144	Restriction Ring – Closet	
M.	0314242	CN-123-AU	Guide Assembly – Urinal	
N.	0314189	CN-43	RC Guide – Urinal	
0.	_	CN-45	NK Restriction Ring – Urinal	
P.	0314234	CN-21-A	Main Seat	
	0314223	CN-121-A	Main Seat – Shower Valve only	

NOTE: Naval® pistons can be used to replace pistons in older Crown® and Star flushometers.

REPAIR KITS

IILI AIII N	110	
Code No.	Part No.	Description
0314016	CN-1002-A	Piston with Main Seat – Closet
0314017	CN-1003-A	Piston with Main Seat – Urinal
5314094	CN-1004-A	Piston Rebuild Kit – Closet & Urinal – 6 per package includes: 13, A, B, C, D, E, I, K, Cap Screw Gasket & Regulating Screw Packing
5314184	CN-1006-A	Piston Rebuild Kit – Shower – 6 per package includes: 13, A, B, C, D, E, I, K, Cap Screw Gasket & Regulating Screw Packing
5314184	CN-1008-A	Regulating Screw Repair Kit – includes: 2, 8, 9, CN-24 Packing Disc, CN-25 Packing Gland, CN-26 Packing Regulating Screw, CN-61 Screw Regulating Stable Piston
0314191	CN-1009-A	Piston with Main Seat – Shower
5314050	CN-1010-A	Crown®/Naval® Valve Washer Set – 6 per package includes: 13, 19, 20, C, D, I, K, Cap Screw Gasket & Regulating Screw Packing
5319049	S-14-AA	Double Cup Repair Kit (Old style Crown, Star and Marine)
5319046	S-14-A	Double Cup Lip Seal only (Old style Crown, Star and Marine)

NOTE: Older Crown® pistons need S-14-A W/CN-1002, 1003 & 1009 if replacing piston.

ITEM 31A. SLIP JOINT GASKETS AND RINGS

	Part No.	Description
5306058	F-3	Red Friction Ring
5322001	VBF-5	Black Slip Joint Gasket
0319086/5319086	S-30	Flexible Seat
0319079	S-21	Rigid Seat (rubber over brass)
4" 0396062	F-105	Slip Joint Gasket – Rigid
5306057	F-3	Red Friction Ring
5322176	VBF-5	Black Slip Joint Gasket
0307052/5307052	VBF-5 S-30 S-21 F-105 F-3	Rigid Seat (rubber over brass)
5306056	F-3	Red Friction Ring
5306115	F-5	Black Slip Joint Gasket
5306055	F-3	Red Friction Ring
5306113	F-5	Black Slip Joint Gasket
	5322001 0319086/5319086 0319079 4" 0396062 5306057 5322176 0307052/5307052 5306056 5306115 5306055	5322001 VBF-5 0319086/5319086 S-30 0319079 S-21 4" 0396062 F-105 5306057 F-3 5322176 VBF-5 0307052/5307052 G-21 5306056 F-3 5306115 F-5 5306055 F-3



Naval® Flushometer

Also for use with Crown® (Old style) Star and Marine

TROUBLESHOOTING GUIDE

IMPORTANT: The NAVAL® flushometer is engineered for quiet operation. Excessive water flow creates noise, while too little water flow may not satisfy the needs of the fixture. Proper adjustment is made when plumbing fixture is cleansed after each flush without splashing water out from the lip AND a quiet flushing cycle is achieved.

Never open Control Stop to where the flow from the valve exceeds the flow capability of the fixture. In the event of a valve failure, the fixture must be able to accommodate a continuous flow from the valve.

ATTENTION INSTALLERS: With the exception of the control stop inlet, DO NOT USE pipe sealant or plumbing grease on any valve component or coupling! To protect the chrome or special finish of Sloan flushometers, DO NOT USE toothed tools to install or service these valves. Use our A-50 Super-Wrench™ or other smooth-jawed wrench to secure couplings. Regulations for low consumption fixtures (1.6 gpf/6.0 Lpf closets and 1.0 gpf/3.8 Lpf urinals) prohibit use of higher flush volumes.

NOTE: In all piston variations the SH-406 spring has replaced the "U" bar. In all piston variations the CN-68-A single lip cup has replaced the S-14-A double lip cup. When rebuilding a piston, install the CN-68-A single lip cup with the cup facing down.

1. Valve DOES NOT function.

- A. Control stop or main valve closed. Open control stop or main valve.
- B. Handle assembly is worn. Install handle repair kit B-51-A or replace handle.

2. Insufficient volume of water to adequately siphon fixture.

- A. Control stop not open enough. Adjust control stop for desired delivery of water.
- B. Urinal or shower piston installed in a closet valve or older blow out urinal. Replace piston with proper closet piston (see item 4).
- C. Regulating screw (on top of valve) not at proper setting. Turn regulating screw counterclockwise to increase flush. Adjustment range: urinal 0.5 to 3 gpf (1.9 to 11.4 Lpf); closet 1.5 to 7 gpf (5.7 to 26.5 Lpf).
- D. Piston worn out. Repair or replace piston.
- E. Inadequate volume or pressure at supply. If no gauges are available to properly measure supply pressure or volume of water at the valve, then completely remove the entire piston from the valve, reassemble cover and open control stop to allow water to pass through empty valve. If the supply is adequate to siphon the fixture, remove the flow ring from the bottom of the piston to provide additional flow. If the supply is not adequate to siphon the fixture, steps should be taken to increase the pressure and/or supply.

Length of flush too short (short flushing) or valve closes off immediately.

- A. Regulating screw not at a proper setting. Turn regulating screw counterclockwise to lengthen flush.
- B. Water passing by damaged or worn piston cup. Repair or replace piston.
- C. Loose piston assembly or loose top plate screw. Tighten top plate screws. Screw piston body and guide together (hand tighten ONLY – rubber relief valve seat will distort if screwed too tight).
- D. Damaged or worn piston top plate or expelor. Repair or replace piston.
- E. Urinal or shower piston installed in a closet valve or older blow out urinal. Replace piston with closet piston CN-1002-A.

4. Length of flush too long (long flushing) or fails to close off.

- A. Regulating screw not at proper setting. Turn regulating screw clockwise to shorten flush.
- B. Relief valve in piston is not seating properly due to wear or debris. Disassemble piston assembly and wash under running water. Repair or replace piston if necessary.
- C. Bypass holes in piston or top plate clogged or fouled with debris. Disassemble piston assembly and wash under running water. Repair or replace piston if necessary.
- D. Closet piston installed in urinal valve. Replace piston with urinal piston CN-1003-A.
- E. Line water pressure has dropped and is not sufficient to force relief valve to seat. Shut off control stop until pressure has been restored, then reopen stop.

5. Water splashes from fixture.

- A. Supply volume is more than necessary. Adjust control stop to meet flow rate required for proper cleansing of fixture.
- B. Lime or mineral accumulation on fixture vortex or spreader holes. Remove lime or mineral build-up in fixture.

6. Flush is not considered "quiet" or makes noise at close off.

- A. Control stop not properly adjusted. Adjust control stop to meet flow rate required for proper cleansing of the fixture.
- B. Worn, damaged or loose main seat. Replace main seat.
- C. Worn piston. Repair or replace piston.

7. Leaking at handle assembly.

- A. The B-39 handle seal may be deteriorated. Install new B-39 handle seal. NOTE: The B-39 seal will easily slide right onto the bushing if it is wet.
- B. Handle gasket has been omitted. Install A-31 handle gasket or handle repair kit B-51-A.
- C. Valve handle bushing is worn. Install handle repair kit B-51-A.

CARE AND CLEANING INSTRUCTIONS

DO NOT USE abrasive or chemical cleaners to clean flushometers that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, protect the flushometer from any splattering of cleaner. Acids and cleaning fluids can discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).