# INSTALLATION INSTRUCTIONS





Hacksaw

Phillips Screwdriver

SU-7025 **Rear Inlet Flat** Back Urinal

# **BEFORE YOU BEGIN**

🔨 WARNING: Risk of personal injury or product damage. Handle with care.


- Vitreous China can break or chip if the bolts and nuts are over-٠ tightened, or if the product is handled carelessly.
- Observe all local plumbing and building codes. .
- Check for any damage to the new urinal before installation. ٠
- Make sure the wall is strong enough to support the new urinal prior • to installation. Reinforce or install a urinal carrier if necessary.




Minimum Flowing Pressure: 10 PSI

WARNING: hazardous gases can escape through the waste pipe if new urinal is not installed quickly. A temporary fix: place a rag in the waste pipe hole.

## **RECOMMENDED TOOLS AND MATERIALS:-**



# INSTALLATION GUIDELINE

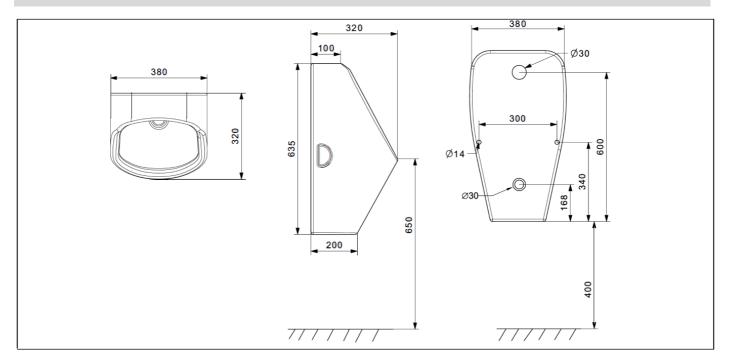

Silicone

SLOAN INDIA PRIVATE LIMITED 344, PHASE-II, UDYOG VIHAR, GURGAON 122015 Phone: (+91) 124-6013333 Toll Free: 1800.123.3080 | customercare@sloan.in | sloan.in Copyright © 2023 Sloan. All rights reserved.

 FOR BEST PERFORMANCE OF YOUR SLOAN® URINAL, USE SLOAN® **Concealed Sensor Urinal Flush** Valve






Tape Measure

Regular Screwdriver

# INSTALLATION GUIDELINE

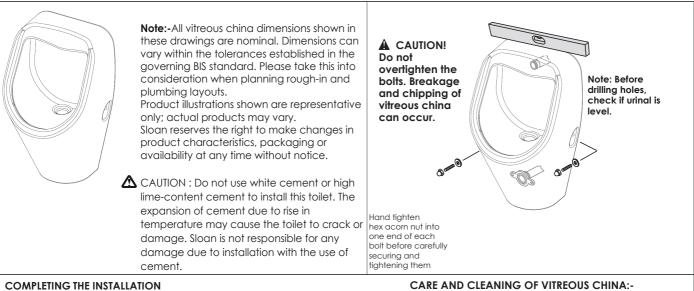

- Install flush valve(not included) to manufacturer's installation instructions.
- Turn on water supply valve.
- Flush urinal a few times and check all connections for water seepage.
- Use Silicone on urinal perimeter where urinal meets the wall surface to provide a suitable hygienic seal.
- Clean urinals with a cleaner safe for vitreous china . Spray and wipe clean using soft cloth. Soft abrasive cleaners may be used to remove stains.

Note: Product illustrations shown are representative only; actual products may vary.

### SLOAN. INDIA PRIVATE LIMITED - LIMITED WARRANTY SUMMARY

Sloan india private limited ("sloan"), warrants its products against defects in materials and workmanship, excluding damage caused by matters beyond sloan's reasonable Control. Instructions for filing claims can be found in the limited warranty which can be obtained at https://www.sloan.com/sloan-india-limited-warranty or by requesting a Free copy by telephone to sloan india toll free number 1 800 123 3080 or via mobile: +91 729 005 0961 or via landline : +91 124 601 3333. Sloan will repair or replace your Defective product, or provide a refund, as your exclusive remedy.

This is only a general summary of sloan's limited warranty so it is important to note that the specific terms, conditions, limitations and exclusions, including the duration of Warranty coverage for your particular sloan product, are contained in the actual sloan limited warranty. The limited warranty is subject to applicable laws in your country, state, Province or other jurisdiction—and disputes arising under the limited warranty are to be resolved by binding arbitration unless you provide sloan with an opt-out notice no later Than 30 days after your purchase date. In case of a conflict with this summary, the terms and conditions set forth in the complete limited warranty will prevail.

The information contained in this document is subject to change without notice.



SLOAN INDIA PRIVATE LIMITED 344, PHASE-II, UDYOG VIHAR, GURGAON 122015 Phone: (+91) 124-6013333 Toll Free: 1800.123.3080 | customercare@sloan.in | sloan.in Copyright © 2023 Sloan. All rights reserved.